

135 S. CHURCH STREET

ADDISON, ILL. 60101

www.electronicdisplays.com



Removing the Audio Function on the EDV111 Industrial Message Displays

- 1. Make sure you check your COM PORT under "Device Manager"
- 2. Make sure that your software is configured as dealer. To do that:
- 3. From the CD open the software/ bin file. Locate the "Config.ini" file and open it.


		File folder		
hin bin	7,761,496	4,698,914 File folder	4/12/2016 12:0	
			,,	
🗟 config.ini	151	107 Configuration se	tti 2/3/2016 9:04	D27ED50D

4. Change the Settings , ProductTarget= dealer

Config.ini - Notepad		-		_		×
File Edit Format View Help						
[Settings]						~
ProductTarget=dealer						
[Fonts] Count=3						
Font1=CST Sans Serif, cstsans.fon						
Font2=CST Serif, cstserif.fon						
Font3=CST Fixed, cstfixed.fon						
<						>
	Ln 2, Col 21	100%	Windows (CRLF)	UTF-	3	

5. Save

- 6. Open WZP software
- 7. Click on "Comm" menu
- 8. Click on the "**sign config'** tab . Make sure that the width and height are correct (if not enter your signs Width and heights, now)

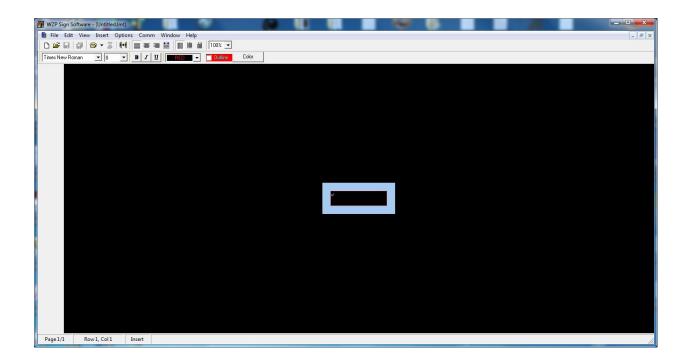

Sign Config					
General MCS Display Board Auto ON/OFF Date & Time Others					
Colour Type	Bi-Colour 🔽				
Address	1				
Group	1				
Width	128				
Height	32				
🔲 I want to cl	hange maximal brightness				
Maximal brightr	ness: 1000				
	OK Cancel Defaults				

- 9. Click on the "Others" tab
- 10. Check the box beside "Disable System Beep'
- 11. Click "OK"

Sign Config	x				
General MCS Display Board Auto ON/OFF Date & Time Others					
Show On Startup					
🔽 Show Baudrate					
Show Sign Address	l l				
🗖 Show Sign Group					
🗖 Show Sign Size					
✓ Disable System Beep					
No data retention during power down					
Enable No COMMS warning					
🔲 Enable Modem init string					
Enable Power on dealy					
OK Cancel Defaults					